

ASSEMBLY INSTRUCTIONS

NEW-TECH WALL MOUNT ITEM#: NTWM



The original wall mounted Ready Rack!

PARTS FOR ASSEMBLY:

All parts shown below:

- Divider Panels
- Top Divider Panels
- Shelving
- Wall Brackets
- Shelf Grippers
- Hanging Pole
- Rubber Grommets
- S-Hooks

(Depending on locker run)

Hardware Needed:

- Wall Anchors
- Drill Bit & Socket
- Wrench
- Snap Chalk Line
- Tape Measure
- Electric Powered Drill
- Pencil

TOOLS SPECS:


Drill and wall anchors will depend on wall material. We recommend a hammer drill for concrete walls.

ASSEMBLY TIME:

The approximate assembly time for the NTWM will average about 25 - 35 minutes per compartment.

VIDEO TUTORIAL:

- URL: www.youtube.com/user/readyrack
- Click "Videos" tab to find the video:
 "New-Tech Wall Mount Assembly Guide"

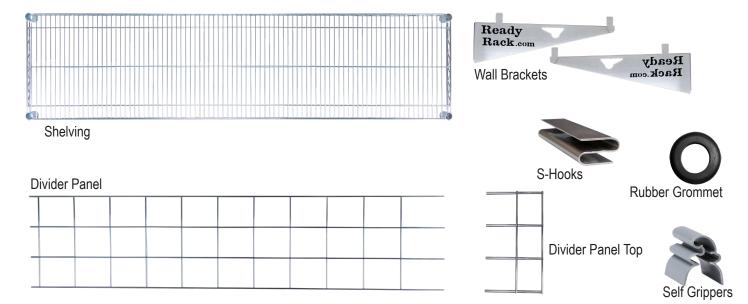

- 1. Start by marking horizontal reference lines with a pencil 6 to 8 inches from the floor. Take your snap chalk line and stretch it beyond the reference points. Snap the line and make sure it is level before proceeding.
- 2. Measure 64 inches up from the first two reference points and mark new horizontal lines. You can now snap the top snap chalk line with the new reference points.







- 3. Hold your first bottom wall bracket in the desired position, lining up the top of the bracket with the chalk line. Mark the four holes on the wall for drilling.
- 4. Take your electric drill and drill into the wall. Be sure where you're drilling is accurately lined up and level to avoid difficulty mounting your wall bracket.
- 5. Now that your holes are drilled, you can now take your anchors and mount your first wall bracket.
- 6. Repeat these steps for the top wall bracket on the same side.







Learn more about Ready Rack by Groves, Incorporated by watching our product videos on Youtube and Facebook @ReadyRack

7. To mount your second bottom wall bracket, you will need a second person to hold your shelf in place with the previously installed parallel wall bracket. After making sure the shelf being held is level, hold your second wall bracket against the wall and mark the holes for mounting your wall bracket.








7.5. If your locker run is longer than a single shelf per level, Start building your NTWM from the left. Make sure that you utilize all your left facing wall brackets for the top and bottom shelves before starting to use the right wall brackets.

Note: Where two shelf lengths meet, you will only use one set of brackets. One for the top shelf level and one for the bottom. Join the following shelf with two S-Hooks. Do not install brackets right next to each other or you will not have enough to complete your installation.

- 8. Take your electric drill and drill into the wall. Be sure where you're drilling is accurately lined up and level to avoid difficulty mounting your wall bracket.
- 9. Now that your holes are drilled, you can now take your anchors and mount your wall bracket.
- 10. Repeat steps 7-8 to complete the rest of your shelves.
- 11. You're now ready to install your divider panels.

 Remove the top of the panels and place them in the desired positions depending on the rack size purchased. Put the top back on and then attach the shelf grippers to hold the divider panels in place.

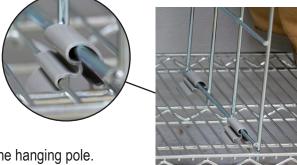

12. Once your divider panels are in place, you can now install the hanging pole. You will do this by sliding the pole though holes in the top wall brackets and attaching the grommets to the ends of the wall bracket to keep it in place.

Learn more about Ready Rack by Groves, Incorporated by watching our product videos on Youtube and Facebook @ReadyRack